



Cat. No. 65-749

 
 
OWNER'S MANUAL




Please read before using this equipment.

128K Electronic Organizer

with Backlight



RadioShack®

 

FEATURES

Your RadioShack 128K Electronic Organizer is a pocket-size data organizer. It's great for the person on the go, combining functions including three telephone directories, bookmark, alarm clock, schedule alarms, a calculator, expense manager, and more in one compact, easy-to-use package. It puts names, companies, addresses, phone numbers, fax/pager numbers, e-mail addresses, web sites, and notes all at your fingertips. The organizer's features include:

128K Memory — gives you ample space for storing phone numbers and schedules.

© 1999 Tandy Corporation.
All Rights Reserved.

RadioShack is a registered trademark
used by Tandy Corporation.



 
Illuminator Backlight — lets you easily see the display in low-light situations.

PC Link Interface — lets you download or upload records from or to your PC using an optional PC link cable.

Password — prevents unauthorized access to your information.




Automatic Power-Off — conserves battery power by turning off the organizer about 6 minutes after you stop using it.

Dual Time Formats — let you set the clock's time to appear in a 12- or 24-hour format.





   Important: Tandy Corporation assumes no responsibility for any loss or claims that might arise through use of this organizer or for damages incurred as a result of information loss due to malfunctions, repairs, battery replacement, or misuse. You should maintain physical records of important information to protect against such loss.



CONTENTS

Preparation	8
Removing the Insulation Strips ...	8
A Quick Look at the Organizer's Features	9
Turning the Organizer On and Off	14
Turning the Key Tone On and Off	14
Using the Backlight	15
Using the Function Menu	16
Clock/Calendar	19
Setting/Viewing the Home Date/ Time	19
Viewing World Times	21
Using the Calendar	22
Entering Data/Using Records	25
Recalling a Record	26
Editing a Record	27
Duplicating Records	29
Deleting a Record	30


Phone	31
Storing a Phone List Record	31
Memo/To Do	33
Storing a Memo Record	33
Storing a Memo Record	33
Storing a To Do Record	34
Daily Alarm	36
Setting the Daily Alarm Time	36
Turning the Daily Alarm On and Off	38
Schedule Alarms	39
Entering a Schedule Alarm	41
Turning Schedule Alarms On and Off	42
Searching for Keywords	43
Expense	44
Entering an Expense Record	44
Making an Expense Report	46
Renaming Expense Categories ..	47
Bookmarks	48
Entering a Bookmark Record	49

Anniversaries	50
Entering an Anniversary Record	50
Passwords	52
Entering the Secret Area	53
Changing the Password	55
Calculator	56
Standard Calculations	56
Square Calculations	57
Memory Calculations	59
Percentage Calculations	61
Data Transfer	62
Transferring All Records	62
Transferring Selected Records ..	65
Maintenance	66
Replacing the Batteries	68
Resetting the Organizer	71
Specifications	75


PREPARATION




 
REMOVING THE INSULATION STRIPS

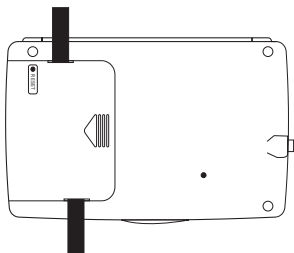 Before you can use the organizer, you must remove the two protective insulation strips from inside the battery compartment. To remove the strips, grasp their ends and gently pull them out in the direction of the arrow.

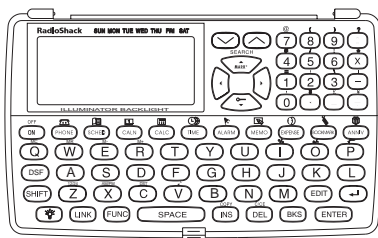

A QUICK LOOK AT THE ORGANIZER'S FEATURES

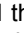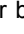


Directional Controls: **SEARCH**  or  and  or  — allow you to search forward or backward through records, and move forward or backward within records.



Numeric Keypad — dual functions allow you to perform both standard and memory calculations, type special characters, and choose selections from a displayed list.






Mode Keys — help you organize your information into categories.

 - **PHONE** — helps you organize phone records and general information about contacts.
- **SCHED** (schedule) — lets you set appointment times and reminders.
- **CALN** (calendar) — helps you find important dates and marks dates listed in **ANNIV** and **SCHED** mode.
- **CALC** (calculator) — lets you perform calculations.
- **TIME** — provides home and world time information.








-
- **ALARM** — sounds at a time you set to remind you of daily events.
 - **MEMO** — lets you keep notes for yourself, as well as a list of things to do.
 - **EXPENSE** — helps you keep track of expenses and create expense reports.
 - **BOOKMARK** — helps you keep track of websites, including addresses.
 - **ANNIV** (anniversary) — lets you keep track of birthdays, wedding anniversaries, and other important dates.

     






Special Keys — help you display, edit, rearrange, and organize your information.

   - **EDIT** — allows you to update information in various records.
- **←** — moves the cursor to the next line of a record.
- **ENTER** — stores information.
- **BKS** (backspace) — moves the cursor backward through a field.
- **DEL** (delete)/**C/CE** — deletes characters to the right of the cursor; clears calculator entries.
- **INS** (insert)/**COPY** — lets you insert characters in a field; copies records.
- **SPACE** — enters a space in a field.





   -
- **FUNC** (function) — allows you to check memory space, change LCD contrast, change languages, set up the date format, and delete data.
 - **LINK** — lets you link your organizer to your PC to transfer information.
 - **SHIFT** — accesses special characters and secondary functions.
 - **DSP** (display) — shows the full record after a search.






 


TURNING THE ORGANIZER ON AND OFF

To turn on the organizer, press **ON/OFF**. Press **ON/OFF** again to turn it off. To conserve battery power, the organizer automatically turns off about 6 minutes after you stop using it.

TURNING THE KEY TONE ON AND OFF


You can set your organizer so a tone sounds each time you press a key. With the organizer turned on, press  (V) to turn the tone on or off. A beep sounds, and  appears. Press  again to turn the key tone off.









Note: You can only turn the key tone on or off when the display shows the current date and time.

USING THE BACKLIGHT

To turn on the illuminator backlight for about 20 seconds, press .

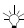   To turn it off before it turns off automatically, press  again.





USING THE FUNCTION MENU

 
Memory Check

Memory check tells you how much memory is left and how many records you have stored in each mode.

Press **FUNC**, then select **1** to check the overall memory and see how many records are stored in each mode. Use **SEARCH** \wedge or \vee to scroll backward or forward.

LCD Contrast

Press **FUNC**, then select **2** to view the current LCD contrast setting.





To adjust the contrast, press **SEARCH**
^ or v.

Languages

This organizer lets you choose from five languages — English, French, Spanish, German, and Italian. Press **FUNC**, select **3**, then select the desired language.

Date Format

 
 
 
1. Press **FUNC** then **SEARCH** v.
2. Select **1**. Three date formats appear.
3. To choose a format, select the number that appears before the format.



Data Deletion

Follow these steps to delete all the data in an individual mode.



1. Press **FUNC** then **SEARCH** \vee .
2. Select **2**, then press **SEARCH** \wedge or \vee to display the modes.
3. Press the number of the mode you want to delete data from. **DELETE (Y/N?)** appears.
4. Press **Y** to delete the information; otherwise, press **N**.





CLOCK/CALENDAR

 
 
 
SETTING/VIEWING THE HOME DATE/TIME

1. Turn on the organizer.
2. Press **SEARCH**  or  until your city appears. If your city is not listed, use a city in the same time zone as yours.
3. Press **EDIT**. The first digit of the month flashes.
4. Use the number keys to enter the month, date, and year on the first line.
5. Enter the current hour and minute.




Note: If you make a mistake, press ◀ or ▶ to move backward or forward to the digit you want to change. Then enter the correct digit.



6. Press **ENTER** to store the date and the time. The day of the week automatically appears.
7. Press **12/24 (Z)** to set the time format to either 12 or 24 hours. In the 12-hour format, **AM** or **PM** appears. Press **AM/PM (X)** to choose AM or PM.
8. To turn daylight saving time on or off, press **DST (C)**. **DST** appears when daylight saving time is turned on.






Note: If any information you entered is invalid (for example, you entered 25 for the hour), the first incorrect digit flashes after you press **ENTER**. Enter the correct digit, then press **ENTER** again.

  
To view the home date and time at any time, press **TIME** .





VIEWING WORLD TIMES

 Once you set your home time, follow these steps to view the time in any of 32 cities around the world.


1. With the home date and time displayed, press **TIME** . The date and time of the last selected city appears.

 
 




-
-
2. Repeatedly press **SEARCH**  or  to select the desired city.


Note: To see the daylight saving time in the selected U.S. city, press **DST**.


3. Press **TIME**  again to return to the home date and time display.




USING THE CALENDAR

To view any week from January 1901 to December 2099 on your organizer's calendar, follow these steps.

  1. Press **CALN** . The display shows the day of the week, the current year and month, and the dates for the current week. The current date flashes.



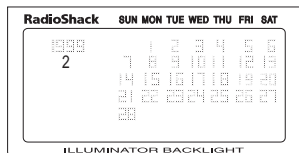

2. To move forward or backward one month at a time, press **SEARCH** \wedge or \vee .

To select a specific date, follow these steps.

1. Press **CALN**.
2. Press **EDIT**. **CALENDAR SEARCH?** and the current date appear.
3. Enter the desired date, month, and year.
4. Press **ENTER**.



 
To search for a date a certain number of days before or after a given date, follow these steps.

1. Select the known date. For example, May 25, 1999.
2. To find the date that is 25 days *after* that date (for example), press **+**. **+ DAYS** appears, and the cursor flashes.

To find the date that is 25 days *before* that date, press **-**. **-DAYS** appears, and the cursor flashes.

3. Enter **25**, then press **ENTER**.
4. The organizer displays the appropriate date.

Note: A dot on the calendar marks each anniversary date you store. See “Entering an Anniversary Record” on Page 50 for instructions.





ENTERING DATA/ USING RECORDS






You enter data in each mode (**PHONE**, **SCHED**, **MEMO**, **ANNIV**, and so on) in the same way.

- Press **SPACE** to enter a space.
- If you make an incorrect entry, press **▶** or **◀** to move to the character you want to change, then type the correct character.
- To skip a field, press **ENTER**.
- To go back to a previous field, press **▲** until the desired field appears.

Note: If not enough space is available for the record you have entered, **FULL** appears. Delete phone records, schedule alarms, memo records, or web site addresses to free additional space.

 


RECALLING A RECORD

1. Press the desired mode key (**PHONE** , for example) until the desired directory prompt appears.
2. Press **SEARCH**  or  to view the first record. You can also enter the first few characters of the record you want to find, then press **SEARCH**  or . The first matching record appears.

Note: If there are no records stored in your organizer or if there is no matching record, **NOT FOUND** appears.

3. Press **DSP** (display) to view the information in the record.
4. To recall another record, repeat Steps 1–3.








EDITING A RECORD

1. Recall the record you want to edit.
2. Press **EDIT**. A flashing cursor appears on the first character of the record.
3. Press ◀ or ▶ to move the cursor to the character you want to edit. To change a character, simply enter the correct character.

To add a character, press **INS** (insert) so a character space appears, then enter a character.

Press **SPACE** to enter a space in place of a character.

   To delete a character, press **DEL**.








-
4. When you finish editing the first field, press **ENTER**. The next field in the record appears on the first line of the display.

Note: Memo records are only one field long.

   5. Repeat Steps 1–4 to edit other fields in the record.
6. To store the edited record, press **ENTER**.
7. Repeat Steps 1–6 to edit additional records or press a mode key to exit.





DUPLICATING RECORDS

You can duplicate any record in the **PHONE**, **SCHED**, **MEMO**, **BOOKMARK**, or **ANNIV** modes by copying it. This is handy if you want to enter a new record that is similar to an existing one.

1. Recall the desired record (a phone record, for example).
2. Press **SHIFT** then **COPY (INS)**. **COPY? (Y/N)** appears.
3. To copy the information, press **Y**. The record list shows both the original record and the duplicated one.
4. Edit the duplicate record as desired.



DELETING A RECORD

1. Recall the record you want to delete.
2. Press **DEL. DELETE? (Y/N)** appears.
3. To delete the record, press **Y**; otherwise, press **N**.




PHONE

 
 
 
STORING A PHONE LIST RECORD

Your organizer has three phone directories (**TELEPHONE 1**, **TELEPHONE 2**, and **TELEPHONE 3**). This section explains how to store a phone list record. See “Entering Data/Using Records” on Page 25 to recall, edit, or delete a phone list record.

You can store a name, company name, address, three telephone numbers, e-mail address, and notes in each phone list record. Each record can be up to 504 characters. See “Entering Data/Using Records” on Page 25 for data entry tips.



-
-
1. Press **PHONE**  once (for **TELEPHONE 1**), twice (for **TELEPHONE 2**), or three times (for **TELEPHONE 3**). The phone list's name (such as **TELEPHONE 1**) and **NAME?** appear.
 2. Enter the desired name and press **ENTER**. (Since the organizer stores phone list records alphabetically by name, you might want to put last names first.)
 3. Enter each piece of information as the organizer prompts you for it (**ADDRESS**, **PHONE1**, and so on).
 4. To store the record, press **ENTER**. **NAME?** appears.
 5. Repeat Steps 2–4 to store additional records, or press any mode key to exit.





MEMO/TO DO

The Memo function lets you record notes to yourself, while the To Do function lets you keep a list of things to do. Each entry can be up to 511 characters long. See “Entering Data/Using Records” on Page 25 for data entry tips.

 
These sections explain how to store memo and to do records. See “Entering Data/Using Records” on Page 25 to recall, edit, or delete either type of record.

STORING A MEMO RECORD

 
1. Press **MEMO** . **MEMO?** appears.




 
-
2. Enter the memo.
 3. To store the record, press **ENTER**.
 4. Repeat Steps 2 and 3 to store additional records, or press any mode key to exit.



STORING A TO DO RECORD

 
 
 


1. Press **MEMO**  twice. **TODO?** appears.
2. Enter the task and other information you want to store.
3. To store the record, press **ENTER**.





4. Press a number key (1–3) to assign a priority level to the record.
5. Repeat Steps 2–4 to store additional records, or press any mode key to exit.





DAILY ALARM

You can set an alarm to sound at a set time of day, even if the organizer is off. When the daily alarm is on, ((●)) appears and a tone sounds at the set time for about 20 seconds. To silence the alarm sooner, press any key.

Note: Because pressing any key turns off the alarm, the alarm might not sound if you are entering information at the alarm time.

SETTING THE DAILY ALARM TIME

1. Press **ALARM**  **ALARM** and the current alarm time appear.

 
 
 





-
2. Press **EDIT**. The first digit of the alarm time flashes.
 3. Use the number keys to enter each digit of the alarm time.

Note: If you make an incorrect entry, press ◀ or ▶ to move backward or forward to the digit that you want to change. Then enter the correct digit.

 
4. If you are using the 12-hour time format, press **AM/PM** to select the correct AM or PM hour.
5. Press **ENTER** to store the alarm time. ((●)) appears on the display's left side to show that the alarm is on.




 



6. Press **TIME**  to return to the current date and time display or press any other mode key.

TURNING THE DAILY ALARM ON AND OFF

 


Press **ALARM** . **ALARM** and the current alarm time appear.



Press **SHIFT**  (V) to turn the alarm on or off. ((●)) appears when the alarm is on.

Note: Turning the daily alarm on or off does not affect schedule alarms (see “Schedule Alarms” on Page 39).





SCHEDULE ALARMS

Schedule alarms keep you in control of your busy schedule by reminding you of meetings and other important events. For each alarm, you can enter an alarm message of up to 511 characters.

 
 
 
At the set time, the alarm sounds for 20 seconds and your stored alarm message appears. If the organizer is off at the set alarm time, the organizer turns on, sounds the alarm tone, and displays the alarm message.

To silence the alarm sooner, press any key.



Notes:


- Since pressing any key turns off the alarm, it might not sound (and the alarm message might not appear) if you are entering information at the schedule alarm time.
- If your organizer is locked at the schedule alarm time, the alarm sounds but the alarm message does not appear. To display the alarm message, you must enter the password (see “Passwords” on Page 52).








ENTERING A SCHEDULE ALARM



To store a schedule alarm, you must enter both the alarm time and a message. See “Entering Data/Using Records” on Page 25 for data entry tips and instructions for editing or deleting schedule records.

     1. Press **SCHED** . **SCHEDULE** and the currently set date and time appear with the first digit of the month flashing.
2. Enter the date and time of the event.
3. If you are using the 12-hour time format, press **AM/PM** to select the correct AM or PM hour.








-
4. Press **ENTER**, then enter the message you want to have displayed when the schedule alarm sounds.
 5. To store the record, press **ENTER**.
 6. Repeat Steps 2–5 to store additional records or press any mode key to exit.



TURNING SCHEDULE ALARMS ON AND OFF

 1. Recall a schedule alarm record.
2. Press **DSP** to display the full record.
3. Press  (**V**) to turn the alarm on or off.  appears when the alarm is on.








Note: Turning a schedule alarm on or off does not affect a daily alarm.

SEARCHING FOR KEYWORDS

If you cannot remember the scheduled time and date for a specific event, you can follow these steps to search for a keyword.

1. Press **SCHED** , then **ENTER**. **NOTE?** appears.
2. Type the first few letters of the message you entered to go with the schedule alarm.
3. Press **SHIFT**, then **SEARCH**  or . The schedule record appears.

 
 
 


EXPENSE

The organizer's expense record function helps you keep track of your finances. You can record each of your expenses and create an expense report. See "Entering Data/Using Records" on Page 25 for data entry tips and instructions for editing or deleting expense records.

ENTERING AN EXPENSE RECORD

1. Press **EXPENSE**, then select 1.
2. The first digit of the month of the expense flashes. Use the number keys to enter the date of the expense.



-
3. Press **ENTER**, then select a pre-set category (such as **MEALS**, **MOTEL**, or **CAR**) for your expense. (To change the category names, see “Renaming Expense Categories” on Page 47.)
 4. Press **ENTER**. **AMOUNT?** appears.
 5. Enter the amount and press **ENTER**.
 6. Choose a payment type (such as **CASH**, **CHECK**, or **CARD**) and press **ENTER**.
 7. **RECEIPT? (Y/N)** appears. Choose **Y** or **N** and press **ENTER**.

 


8. Enter a note in the next field, if desired, then press **ENTER** to store your expense record.

MAKING AN EXPENSE REPORT

If you want to know general expense information within a certain period, you can use the organizer's expense report function.

1. Press **EXPENSE**, then select **2**.
2. Enter the report's starting date, then press **ENTER**.
3. Enter the report's ending date, then press **ENTER**.
4. Press **▲** or **▼** to scroll backward or forward through the report.








RENAMING EXPENSE CATEGORIES

To change the organizer's default expense settings, follow these steps.

   1. Press **EXPENSE**, then select 3.
2. Enter the number for the category you want to change, then press **ENTER**.
3. Enter the new name, up to 10 characters.
4. To store the new name, press **ENTER**.





BOOKMARKS

You can use your organizer's bookmark function to store an Internet site name, web site address, and note in each web site record.

The world wide web is a useful resource, with information on literally millions of companies, organizations, and individuals. For example, the address for Tandy Corporation is <http://www.tandy.com>.



You probably have a list on your home or office computer for the sites you frequently visit. You can use your organizer to help keep track of these addresses and have them with you wherever you go.

See "Entering Data/Using Records" on Page 25 to recall, edit, or delete a web site record.






ENTERING A BOOKMARK RECORD

1. Press **BOOKMARK**  **. NAME?**  appears.
2. Enter a web site name (Tandy Corp., for example), then press **ENTER**. **WEB SITES?** appears.
3. Enter a web site address, then press **ENTER**. **NOTE?** appears.
4. Enter notes (to remind yourself about what can be found on this site, for example), if desired, then press **ENTER** to store the bookmark.




ANNIVERSARIES

Use the organizer's anniversary function to store important dates that you want to remember (such as birthdays, anniversaries, and so on). To enter the calendar mode, press **CALN** . A dot appears on the calendar to mark each date you set.

 
 
 
See "Entering Data/Using Records" on Page 25 for data entry tips and instructions for editing or deleting anniversary records.

ENTERING AN ANNIVERSARY RECORD

1. Press **ANNIV** . **DATE?** appears, and the first digit of the month field flashes.



2. Enter the desired date and press **ENTER**.
3. **NOTE?** appears. Enter other information you want to store with the record, if desired.
4. To store the record, press **ENTER**.





PASSWORDS


You can block unauthorized access to information by entering it in an area which is protected by a password that you assign. Once you enter the password, all the records you enter are automatically stored in the secret area. You must enter the password to recall a record in the secret area.

Once inside the secret area, you enter, recall, edit, or delete a secret record as you would any other record (see “Entering Data/Using Records” on Page 25).






ENTERING THE SECRET AREA

1. Press **SHIFT** then  . **PASS-WORD?** appears.
2. Enter the password, from 1 to 8 characters long.

 
Notes:






- If this is the first time you are answering this question, you are about to set the password.
- Be sure you set a password that you can easily remember. If you forget it (or want to remove it), you must reset the organizer, which clears all records. (See “Resetting All Memory” on Page 73.)






-
3. Press **ENTER**. If the password is correct,  appears on the left side of the display.

 
If the password is incorrect, the display clears and the cursor blinks. Re-enter the correct password.



 To exit the secret area, turn off the organizer, or press **TIME** , **CALN** , **CALC** , **ALARM** , so  disappears.







To re-enter the secret area, press the desired function's key then **SHIFT** , enter the password, and press **ENTER** so  appears again.






CHANGING THE PASSWORD

1. Press **SHIFT**  (). **PASS-WORD?** appears.
2. Enter the current password.
3. Press **ENTER**.  appears on the left side of the display.
4. Press **SHIFT**  again. **NEW PASSWORD?** appears.
5. Enter the new password, up to 8 characters long.
6. Press **ENTER** to store the new password.



CALCULATOR

Press **CALC**  once to use the calculator. **CALCULATOR** and 0 . appear.

STANDARD CALCULATIONS

Press the keys in the order they appear in the arithmetic operation.

For example:

You Press	You See
$3 + 4 =$	$=$ 7 .
$8 \times 3 - 4 =$	$=$ 20 .





Press **C/CE (DEL)** once to clear the last entry. Press **C/CE** twice to clear all pending calculations.

Note: **E** (error) appears if the result of a calculation has more than 10 digits, if you try to calculate the square root of a negative number, or if you try to divide by 0. To clear the error, press **C/CE**.

SQUARE CALCULATIONS

To do square calculations, press the number, then **x**, then **=**.




For example, to calculate 4^5 :

You Press	You See
$4 \times = = =$	$=$ 1024.

To do square root calculations, press the number, then $\sqrt{}$ (P).

For example, to calculate the square root of 4:

You Press	You See
$4 \sqrt{}$	2.

 



MEMORY CALCULATIONS

The memory calculation feature lets you perform multi-step calculations easily.

- Press **MC** (**Q**) to clear the memory.
- Press **M+** (**R**) to total a calculation and add the total to memory.
- Press **M-** (**E**) to total a calculation and subtract the total from the value in memory.
- Press **MR** (**W**) to recall the value in memory.

- Press **MC** to clear the memory. **M-** appears when you store a value in memory, and disappears when you clear the memory.

For example, to perform this calculation:

$$(4 \times 5) + (28 + 2) - (7 - 2) + (75 \div 5)$$

You Press	You See
CALC	0 .
C/CE	0 .
MC	0 .
$4 \times 5 = \text{M+}$	M+ 20 .
$28 + 2 = \text{M+}$	M+ 30 .
$7 - 2 = \text{M-}$	M- 5 .

You Press	You See
$75 \div 5 = M+$	M+ 15 .
MR	M- 60 .
MC	60 .

PERCENTAGE CALCULATIONS

To find a percentage of a number, type the number, then \times , the percentage, and %.






For example, to find 3 percent of 12:

You Press	You See
$12 \times 3 \%$	= 0.36



DATA TRANSFER

To transfer data from your organizer to a computer (or vice-versa), you must first connect a PC Link cable (available through RadioShack Unlimited) between the **PC PORT** jack on the organizer and your PC's serial port (see the PC Link Owner's Manual). Then follow the steps under "Transferring All Records" or "Transferring Selected Records" on Page 65.

You can transfer only **BOOKMARK** , **PHONE** , **SCHED** , **MEMO** , or **ANNIV**  records.

TRANSFERRING ALL RECORDS

1. Install the PC Link software on your computer according to the in-
62





structions in the PC Link's owner's manual.

 
 
 
2. Select **Model L** from the PC Link Menu.
3. Press the desired function key to transfer all of its records to your PC.
4. Follow the directions in the PC Link's owner's manual to specify the serial port to use to connect the computer and organizer, and to select the same function that you selected on the organizer.
5. Press **LINK** on your organizer.
TX.RX. ? (T/R) (transmit/receive) appears.
6. To transmit from the organizer to the PC, press **T** on the organizer.
TRANSMIT . . . appears.



To receive from the PC, press **R** on the organizer. **RECEIVING...** appears.

Notes:

- If an error occurs during the transfer, **ERROR** appears. Repeat the procedure.
- When the record transfer to the organizer is complete, the organizer pauses to update its records, then the normal display appears.
- To cancel the transfer at any time, press **C/CE**.





TRANSFERRING SELECTED RECORDS

1. To transmit only selected records, recall the desired record.
2. Press **SHIFT MARK***. * appears to the left of the recalled record.
3. Repeat Steps 1 and 2 to mark all the records you want to transfer.
4. Press **SHIFT** then **LINK**. **SEND MARK DATA? (Y/N)** appears.
5. To transfer the marked record(s) to your PC, press **Y**; otherwise, press **N**.

 


MAINTENANCE

To enjoy your organizer for a long time:

- Keep the organizer dry. If it gets wet, wipe it dry immediately.
- Use and store the organizer only in normal temperature environments.
- Handle the organizer gently and carefully. Don't drop it.
- Keep the organizer away from dust and dirt.
- Wipe the organizer with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the organizer's internal components can cause a malfunction and invalidate its warranty and void your FCC authorization to operate it. If your organizer is not





performing as it should, take it to your local RadioShack store for assistance.

 
 
Notes:

- At very low temperatures, the display's response time might slow down or the display might fail completely. This is only temporary. The organizer works normally again when it returns to a normal temperature.
- If the organizer is exposed to strong static electric charges, the display might become dim or the organizer might fail to operate properly. If this happens, reset your organizer (see "Resetting the Organizer" on Page 71).



REPLACING THE BATTERIES


Your organizer is powered by two 3V CR2032 lithium batteries and is backed up by another of the same type.



When the display dims or stops working properly, replace the main batteries. To protect the data stored in your organizer, replace the backup battery once a year. We recommend RadioShack batteries for both purposes.

Caution: To avoid losing stored data:

 
- Never remove both the main and backup batteries from the battery compartment at the same time.




- Be sure to turn off your organizer when replacing the battery.
- Remove the old battery(ies) and install the new one(s) as quickly as possible.

Follow these steps to replace the main batteries or the backup battery.

 1. Press **ON/OFF** to turn off the organizer.
2. Slide the battery cover off in the direction of the arrow marked on the cover.

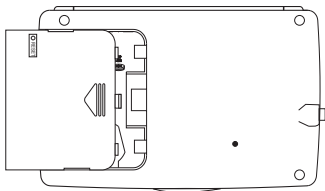

 3. Use a straightened paper clip or the end of a screwdriver to gently pry out the battery or batteries you are replacing, then install the new one(s) with the positive (+) side(s) facing up.

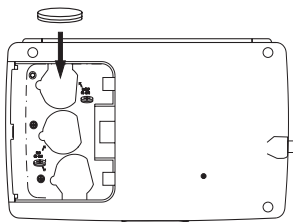

Warning:

- Always dispose of old batteries promptly and properly. Never burn or bury them.



 
 
 
-
- Keep batteries out of reach of children. Swallowing a button cell battery could be fatal.

4. Replace the cover.

RESETTING THE ORGANIZER




Resetting the Secret Memory

Follow these steps to reset the organizer and clear the records stored in the secret memory. This is useful if you want to free up memory.






   1. Use a pointed object (such as a straightened paper clip) to press the **RESET** hole in the back of your organizer. **RESET? (Y/N)** appears.

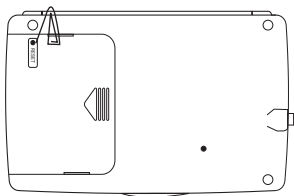

 2. Press **Y**. **DELETE SECRET?** appears. Otherwise, press **N** to cancel.





-
3. To delete all secret memory records, press **Y** again.

The current date and time appear.
All the records stored in the organizer's secret memory are cleared.

 
 
 
Resetting All Memory

To clear all the stored information in the organizer (if you forget your password, for example), follow these steps to completely reset the organizer.

1. Follow the steps in "Resetting the Secret Memory" on Page 71 and press any key except **Y** in Step 3. **ERASE DATA?** appears.



-
-
2. Press **Y**. All the information stored in the organizer's memory (including records in the secret area) is cleared.
 3. Re-enter the key tone, current date and time, and daily alarm settings.





SPECIFICATIONS

Power Source 3 Lithium Batteries,
Two Main, One Backup 3V,
Type CR2032

Battery Life:

Main About 6 Months

Backup About 1 Year

Automatic Power-Off: About 6 Minutes

Working Temperature 32°–109.4°F
(0°–43°C)

 
 
 
Dimensions (HWD): $3\frac{3}{8} \times 5\frac{7}{16} \times \frac{1}{2}$ Inches
(85 × 138 × 13 mm)

 
 
 
Weight (with Batteries) 3.75 oz
(105 g)

Specifications are typical; individual units
might vary. Specifications are subject to
change and improvement without notice.



NOTES





Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow the limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

(Continued)

(Continued)

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or re-conditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

(Continued)



(Continued)

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations,
200 Taylor St., 6th Floor,
Fort Worth, TX 76102

We Service What We Sell 4/99

RadioShack
A Division of Tandy Corporation
Fort Worth, Texas 76102

09A99

086-007850-116
Printed in Hong Kong